RadioShack®

User's Guide **61-265**

Plug-in Timer

Thank you for purchasing your Plug-in Timer from ***RadioShack****. Please read this user's guide before installing, setting up, and using your new timer.*

Package contents

- Timer
- ON/OFF Pins (5 pairs)
- User's Guide
- Quick Start

Features

- Turns an electrical device on or off after a certain amount of time
- Child safety feature to help prevent accidents

① Place the pins

1. Press and hold the **Push To Release Pins** button to remove pins currently on the dial.
2. Open the compartment at the back of the timer to access extra pins.

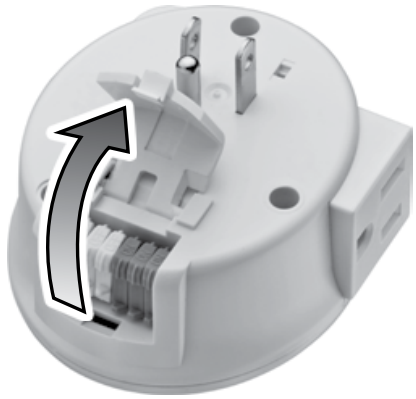

Note: *Store spare pins in the compartment to avoid losing them.*

② Set time intervals

Turn on for a set time:

1. Insert the **ON** pin (grey) at the time you want to start a device that is not currently on.
2. Insert the **OFF** pin (white) at the time you want to turn the device off again.
3. Set the timer's **ON/OFF** switch to **OFF**.

Turn off at a set time:

1. Insert the **OFF** pin at the time you want a currently running device to turn off.

2. Insert the **ON** pin at the time you want the device to turn on again.
3. Set the timer's **ON/OFF** switch to **ON** so the device starts in that state.

Set up to four extra intervals as needed.

Note: *Push pins down firmly until you hear a click.*

③ Set the time dial

Rotate the dial clockwise to align the **TIME** arrow with the scale marking the approximate current time. The white scale is for AM, and black is for PM.

Note: *In case of power failure, rotate the dial again to adjust the correct current time.*

④ Make connections

As soon as you set the timer, plug your device into the timer, then plug the timer into a wall outlet. Turn on your device.

ON/OFF Switch

Rotate anti-clockwise to set to on or off.

TIME Arrow

ON Pin

OFF Pin

Push to Release Pins

Time Dial

Rotate clockwise to set to the current time.

Notes:

- *If you fail to make connections promptly, there will be a time difference between your set time and actual operation of the timer.*
- *If your device is switched ON, but the timer is in OFF mode, the device will not turn on when plugged in.*

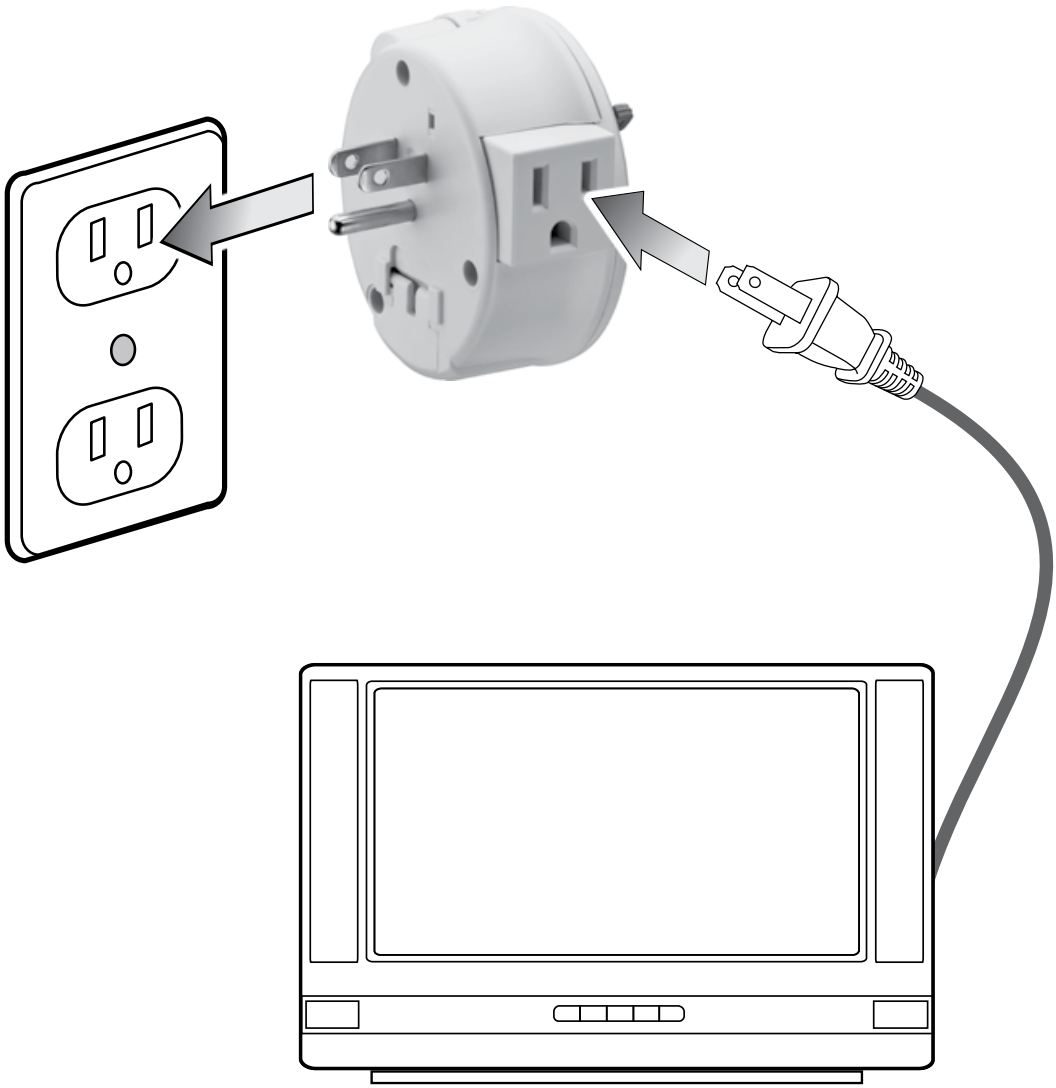

Specifications

Input.....110~125V AC, 60Hz

Output .....125V AC 15A, 1000W tungsten, 1/4HP

Minimum Interval.....30 min.

Dimensions (H×W×D) ..... 3.3 × 3 × 2.5 in
(83 × 75 × 63 mm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a ***RadioShack***-owned store or an authorized ***RadioShack*** franchisee or dealer. ***RADIOSHACK*** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a ***RadioShack*** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the ***RadioShack*** sales receipt as proof of purchase

date to any ***RadioShack*** store in the U.S. ***RadioShack*** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of ***RadioShack***. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, ***RADIOSHACK*** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF ***RADIOSHACK*** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal

rights, and you may also have other rights which vary from State to State. You may contact ***RadioShack*** at:

RadioShack Customer Relations, 300 RadioShack Circle, Fort Worth, TX 76102 04/08

www.RadioShack.com

Conforms to UL Std. No. 917 and 498A

Certified to CSA Std. C22.2 No. 177 and 42

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

©2010. ***RadioShack*** Corporation. All rights reserved. ***RadioShack*** and ***RadioShack.com*** are trademarks used by ***RadioShack*** Corporation.

Printed 01A10
in China 61-265